

PhotoFast SIP Firmware Updater (Windows)

Revision History

Revision No.	Date	Note	
1.0	2017/8/1	Initial release	

Firmware Release Note

- Fixed PhotoFast USB storage device firmware may be reset randomly, causing the USB drive to be unrecognized by iOS or PC/MAC computer.

Important:

DO NOT run the application in VM environment (Virtual Box, Parallels, ...etc) or the update process may fail.


This Firmware Update Tool supports the following PhotoFast products:

- PhotoFast MAX USB 3.0 / V2 (firmware: 1722)
- PhotoFast MAX Hello Kitty U3 (firmware: 1727)
- MemoriesCable U3 (firmware: 2005)
- MemoriesCable GEN 3 (firmware: 2016)
- Photo Backup Cable (firmware: 2008)
- Hello Kitty Photo Backup Cable (firmware: 2017)

And the following Gigastone products:

- IF-6600 (firmware: 1724/1729)

The USB connector of the above products should look like these on the right:

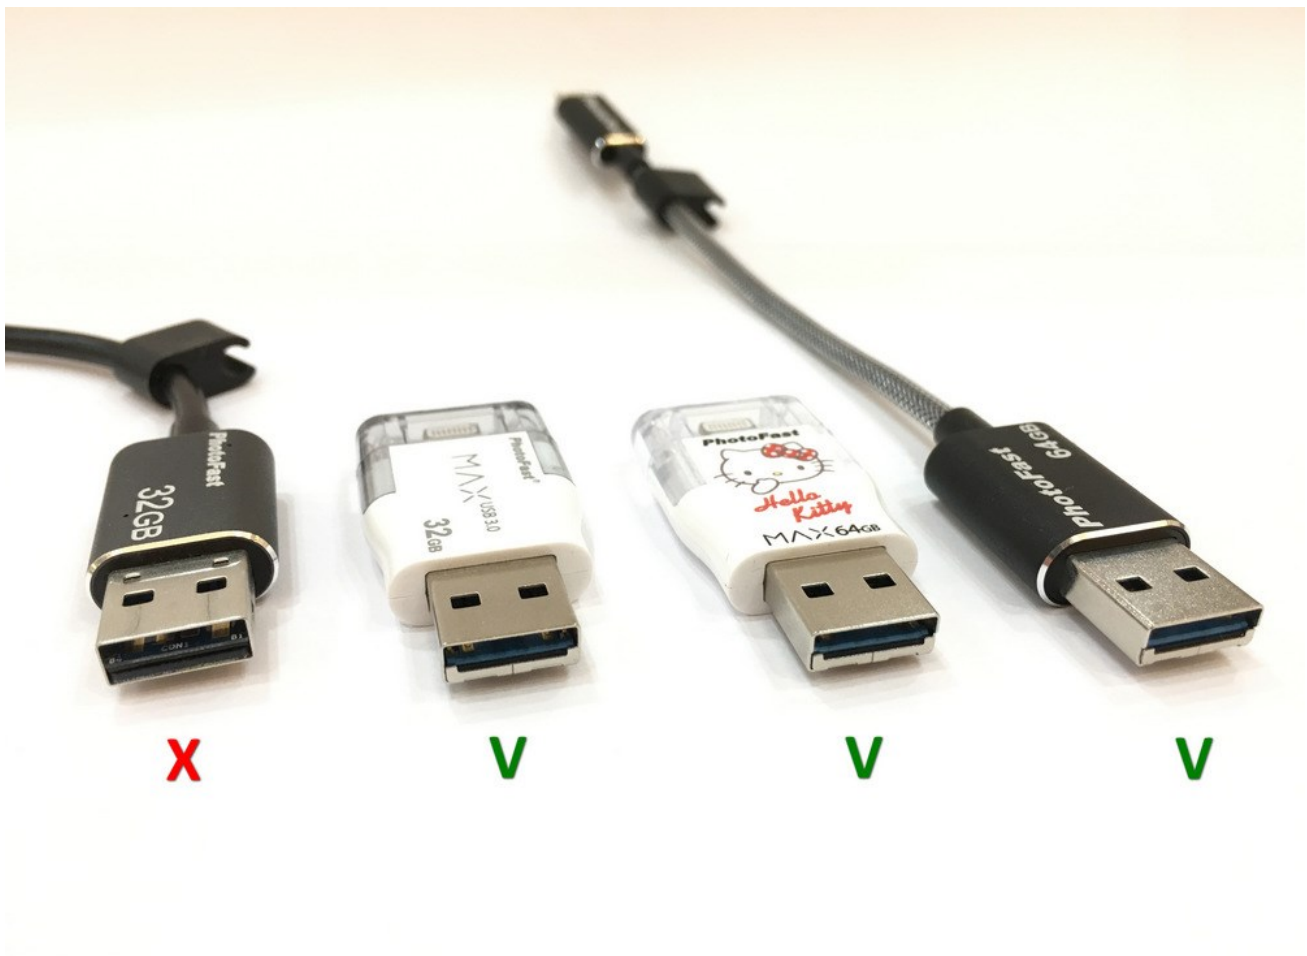


If the USB connector looks like the one on the left, there is no need to update the firmware.


How to check the firmware of your PhotoFast product?

1. Connect the PhotoFast product to iPhone/iPad
2. Go to “iOS Settings > General > About > [PhotoFast device] > Firmware Version”

 1. Download
http://www.photofast.com/wordpress/wp-content/uploads/2017/08/PhotoFast-SIP-Firmware-Updater_Win.zip (1.5MB) and uncompress the file to your computer.
2. Connect the PhotoFast USB storage device to your computer and run the **PhotoFast SIP Firmware Updater.exe** program.
3. Click **“Update”** to refresh the USB port and the name of the PhotoFast device should appear.

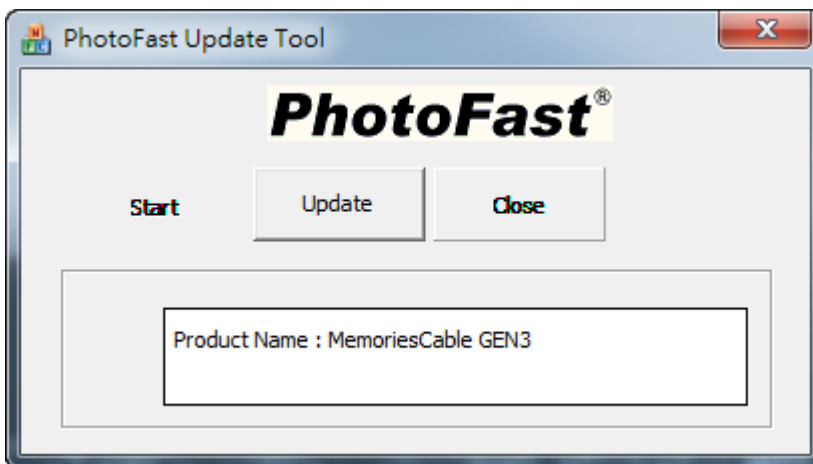

 4. Click **“Start”** to start the update process, it will take approximately 60~90 seconds.
Note: DO NOT disconnect the USB device or close the application before the update process is completed or the USB device may be damaged!

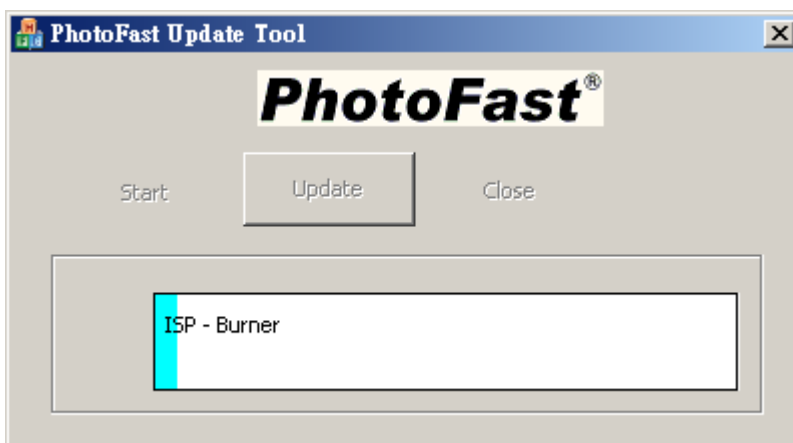

- When the update process is complete, the following prompt will appear.



- Click "OK" and it's done.